


INSTALLATION GUIDE



Make: MAN

Model: TGM mk3

Year: 2013-2020

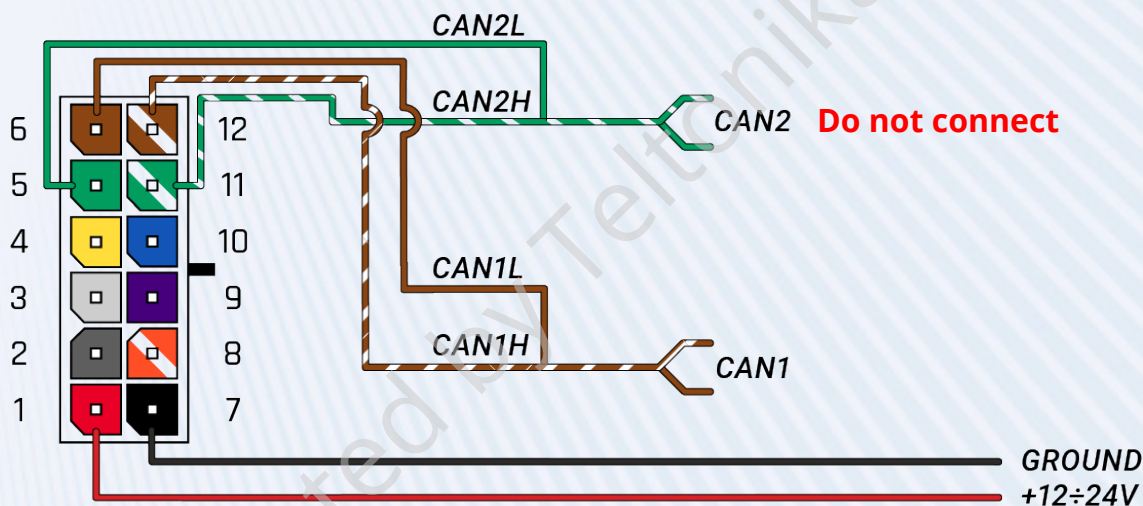

Installation steps:

1. Upload vehicle CAN configuration via FOTA WEB.
2. Connect FMX150 CAN cables to the wires as shown in the installation guide.
3. Connect the power and GND to the wires as shown in the installation guide.

In case of right hand drive vehicle please look for the mentioned connection location on the other side. If it's not available there then check the original location. If neither, please contact Teltonika Telematics Support!

Troubleshooting - in case there are issues with CAN data:

Please contact Teltonika Telematics Support with the following information:

- Vehicle make/model/year
- Chassis code or generation/VIN number
- Responses to oeminfo, Ivcngetinfo, Ivcncheck SMS/GPRS commands
- Connection pictures
- FMX150 firmware

Access to connection points

Connect the FMX150 CAN cables to the vehicle's can connector. the can connector is located in passenger side right from the steering wheel, next to the fuse box.



Vehicle CAN bus and power location

Device **MUST NOT** be installed when ignition is on!!!

CAN wires: wires of the plug




Vehicle CAN bus connections*

CAN1L: blue-white wire

CAN1H: blue-red wire

*NOTE! Wire colors might differ due to various factors on manufacturer's side.
In such cases, please follow connection points shown in photos.

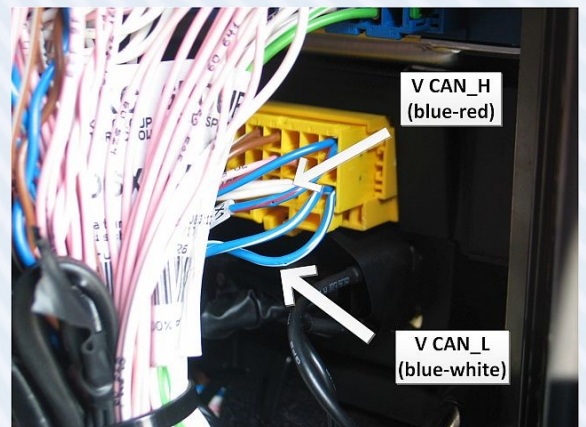

Power connections

Battery: battery+ point - point 30 (DIN 72552)

Ignition: ignition point - point 15 (DIN 72552)

GND: chassis