


INSTALLATION GUIDE



Make: Mercedes-Benz

Model: Actros Mp4 (SFTP)

Year: 2011-2019

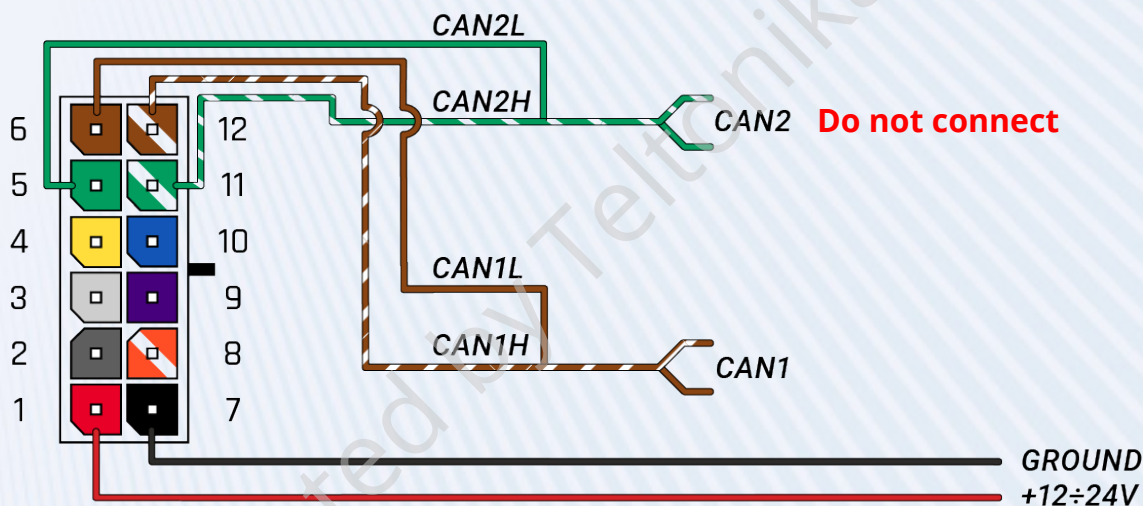

Installation steps:

1. Upload vehicle CAN configuration via FOTA WEB.
2. Connect FMX150 CAN cables to the wires as shown in the installation guide.
3. Connect the power and GND to the wires as shown in the installation guide.

In case of right hand drive vehicle please look for the mentioned connection location on the other side. If it's not available there then check the original location. If neither, please contact Teltonika Telematics Support!

Troubleshooting - in case there are issues with CAN data:

Please contact Teltonika Telematics Support with the following information:

- Vehicle make/model/year
- Chassis code or generation/VIN number
- Responses to oeminfo, lvcngetinfo, lvcncheck SMS/GPRS commands
- Connection pictures
- FMX150 firmware

Access to connection points


Remove the covers on the passenger side.



Vehicle CAN bus and power location

Device **MUST NOT** be installed when ignition is on!!!


CAN wires: wires of the plug

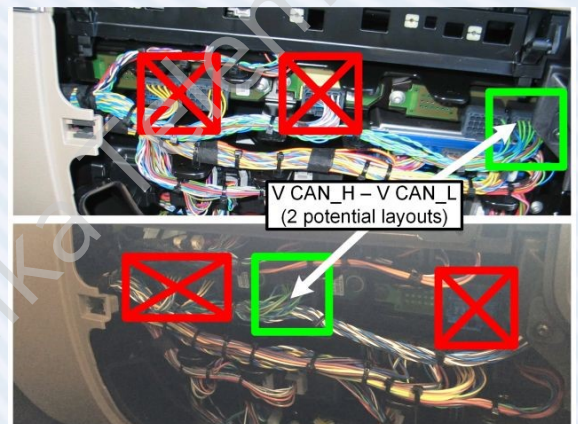

Vehicle CAN bus connections*

CAN1L: green wire

CAN1H: blue wire

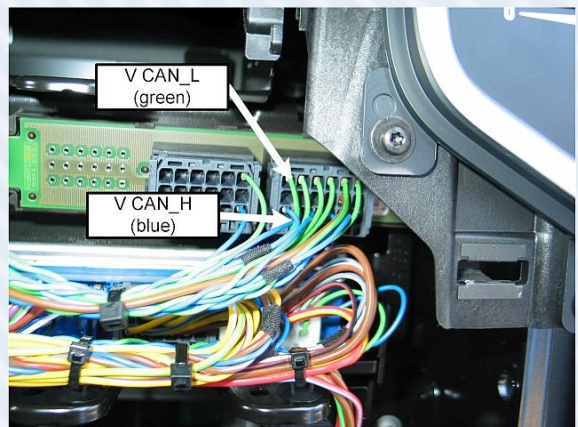

Please note! On some vehicles the necessary connector is not located on the right side, instead in the middle!

*NOTE! Wire colors might differ due to various factors on manufacturer's side.

In such cases, please follow connection points shown in photos.

Power connections

Battery: battery+ point - point 30 (DIN 72552)

Ignition: MB Actros pink plug black wire

GND: chassis

