


INSTALLATION GUIDE



Make: Renault

Model: Midlum dCi

Year: 2002-2006

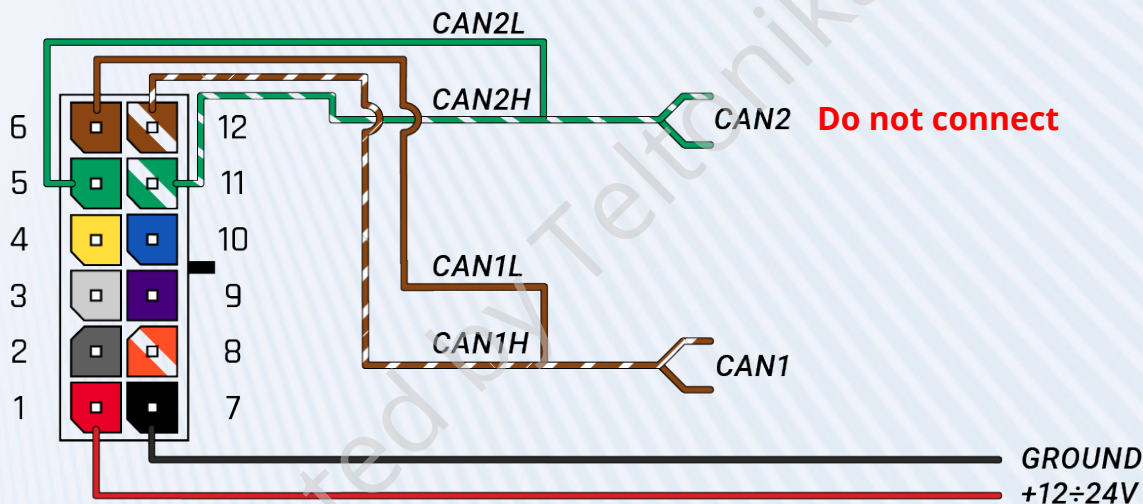

Installation steps:

1. Upload vehicle CAN configuration via FOTA WEB.
2. Connect FMX150 CAN cables to the wires as shown in the installation guide.
3. Connect the power and GND to the wires as shown in the installation guide.

In case of right hand drive vehicle please look for the mentioned connection location on the other side. If it's not available there then check the original location. If neither, please contact Teltonika Telematics Support!

Troubleshooting - in case there are issues with CAN data:

Please contact Teltonika Telematics Support with the following information:

- Vehicle make/model/year
- Chassis code or generation/VIN number
- Responses to oeminfo, Ivcngetinfo, Ivcncheck SMS/GPRS commands
- Connection pictures
- FMX150 firmware

Access to connection points

Remove the covers on the passenger side.



Vehicle CAN bus and power location

Device **MUST NOT** be installed when ignition is on!!!

CAN wires: wires of the VECU




Vehicle CAN bus connections*

CAN1L: VECU 15 pole connector pin 12 (wire 0013)

CAN1H: VECU 15 pole connector pin 4 (wire 0012)

*NOTE! Wire colors might differ due to various factors on manufacturer's side.
In such cases, please follow connection points shown in photos.

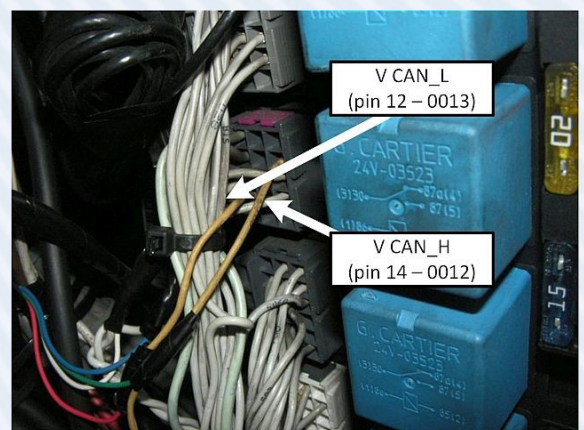

Power connections

Battery: battery+ point - point 30 (DIN 72552)

Ignition: ignition point - point 15 (DIN 72552)

GND: chassis