


INSTALLATION GUIDE



Make: Volvo

Model: FH mk3

Year: 2013-2020

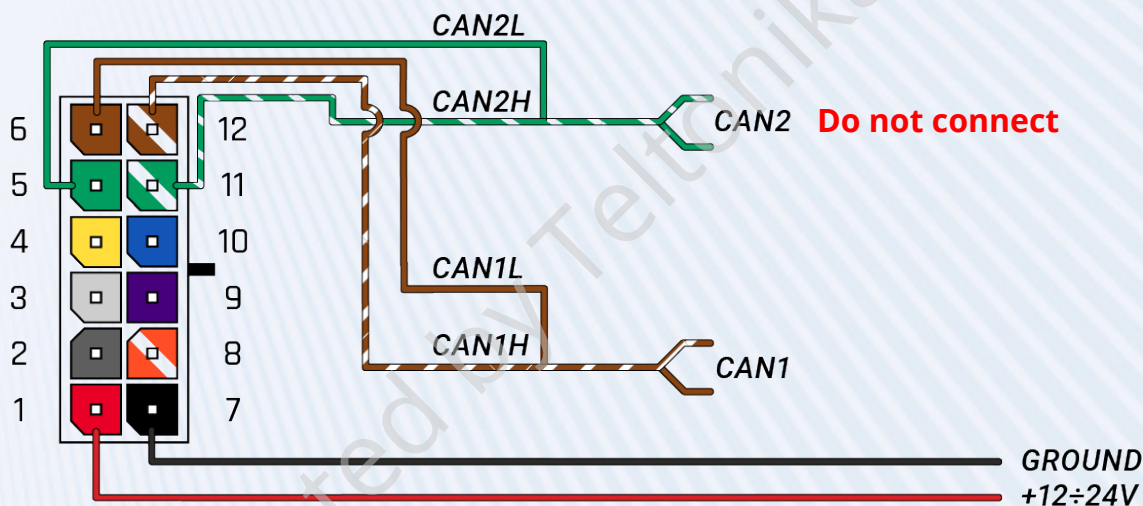

Installation steps:

1. Upload vehicle CAN configuration via FOTA WEB.
2. Connect FMX150 CAN cables to the wires as shown in the installation guide.
3. Connect the power and GND to the wires as shown in the installation guide.

In case of right hand drive vehicle please look for the mentioned connection location on the other side. If it's not available there then check the original location. If neither, please contact Teltonika Telematics Support!

Troubleshooting - in case there are issues with CAN data:

Please contact Teltonika Telematics Support with the following information:

- Vehicle make/model/year
- Chassis code or generation/VIN number
- Responses to oeminfo, lvcngetinfo, lvcncheck SMS/GPRS commands
- Connection pictures
- FMX150 firmware

Access to connection points


Remove the cover of the fuse box then lift the panel up.



Vehicle CAN bus and power location

Device **MUST NOT** be installed when ignition is on!!!

CAN wires: wires of the black connector with orange bracket located next to the pink connector.

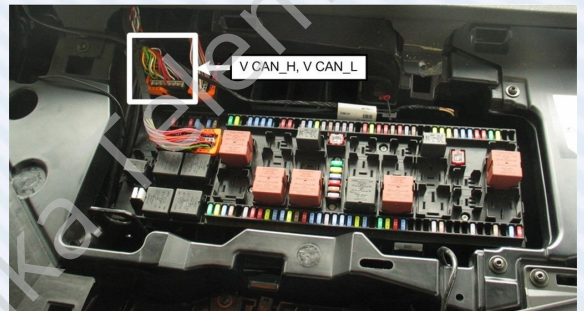

Vehicle CAN bus connections*


CAN1L: black connector green wire (7005)

CAN1H: black connector yellow wire (7004)

The wires 7004-7005 are not always present in the shown connector, in this case look for a green connector nearby

*NOTE! Wire colors might differ due to various factors on manufacturer's side.

where they are present.
In such cases, please follow connection points shown in photos.

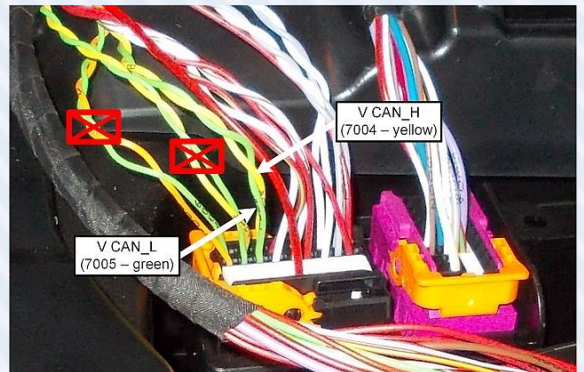

Power connections

Battery: battery+ point - point 30 (DIN 72552)

Ignition: ignition point - point 15 (DIN 72552)

GND: chassis

